



WAX WARMING POT

INSTRUCTIONS FOR USE













Instructions for use

13

SUCK WAX WARMING POT

- Diese Gebrauchsanweisung können Sie in weiteren Sprachen unter nachfolgendem Link herunterladen oder telefonisch anfordern.
- Tämän käyttöohjeen voitte ladata useilla eri kielillä seuraavasta linkistä tai pyytää tietoja puhelimitse.
- Puede descargar este manual en diferentes idiomas en el siguiente enlace o bien solicitarlo por teléfono.
- Instrukcje te mogą być pobierane w innych językach pod poniższym linkiem lub telefonicznie
- Tento návod je také k dispozici v jiných jazycích. Použijte prosím následující odkaz ke stažení návodu nebo si je vyžádejte telefonicky.
- Šo lietošanas instrukciju citās valodās iespējams lejuplādēt zemāk norādītajā saitē vai pieprasīt telefoniski.
- This manual is also available in other languages. Please use the following link to download the manual or request it on the phone.
- Questo manuale è disponibile anche in altre lingua. Lo si può scaricare utilizzando il seguente link o richiederlo per telefono.
- 此說明書另有提供其他國家語言,請點擊此連結下載檔案,或透過電話詢問下載亦可。
- Navodila za uporabo lahko v številnih jezikih pridobite na sledeči povezavi ali naročite prek telefona
- Acest manual este disponibil si in alte versiuni de limba. Accesati link-ul urmator pentru a descarca manualul sau il puteti solicita telefonic.
- Вы можете загрузить руководства по эксплуатации на других языках кликнув на ссылку или запросив по телефону
- Τις οδηγίες χρήσεως μπορείτε να τις βρείτε και σε άλλες γλώσσες, πατώντας στο παρακάτω link για να τις κατεβάσετε ή να τις ζητήσετε τηλεφωνικώς.
- U kunt de gebruiksaanwijzing in diverse talen downloaden onder de volgende link. Ook kunt u deze telefonisch aanvragen.
- Ce manuel d'utilisation est disponible aussi en autre langues. Veuillez utiliser le lien suivant pour le télécharger ou demandez-le par téléphone
- Bu kullanım kılavuzunu farklı dillerdede aşağıdaki bağlantıdan indirebilir yada telefon ile istiyebilirsiniz.
- Atsisiųskite instrukcija lietuvių kalbą paspaudę šią nuorodą, arba paskambinę telefonu
- A használati útmutatót magyar nyelven a következő linkről tudja tölteni, vagy kérheti telefonon.
- ן ופלטב ותוא שקבל וא אבה קנילב תופסונ תופשב הלעפהה תוארוה תא דירוהל לכות. ■
- 여러 언어로 된 본 사용설명서를 다음 링크에서 다운로드하시거나 전화로 요청하실 수 있습니다.
- Hægt er að sækja bessar notkunarleiðbeiningar á öðrum tungumálum með eftirfarandi tengli eða panta bær símleiðis
- Ezen kezelési útmutató további nyelveken a következő linken keresztül tölthető le, vagy telefonon megkérhető
- この取扱説明書はその他の言語でも以下のリンクでダウンロードしていただくことが可能です。またはお電話でも問い合わせいただければご案内申し上げます。
- Denne brugsanvisning kan du downloade på flere sprog på efterfølgende link eller bestille telefonisk
- Denna bruksanvisning på andra språk kan du antingen ladda ned från följande länk eller beställa på telefon
- Цю інструкцію по експлуатації на інших мовах ви можете завантажити за нижчевказаним посиланням на сайт або запросити по телефону
- 1. www.hellmut-ruck.de
- 2. Search term: "3011901"
- 3. Downloads







Rebune Int'l Co., Ltd | Guangzhou P.R.China

Phone: 0086 - 20 - 86679717 | Mobile: 0086 - 15920451241 | Fax: 0086 - 20 - 86679716 | E-mail: sales@rebunehk.com | Web: www.rebunehk.com

Distributed by:

HELLMUT RUCK GmbH | Daimlerstrasse 23 | D - 75305 Neuenbürg, Germany web www.hellmut-ruck.de | tel. +49 (0)7082. 944 20 | fax +49 (0)7082. 944 22 22

Copyright

© 2020 HELLMUT RUCK GmbH. All rights reserved. This document may not be copied, edited, reproduced or translated without prior written permission of HELLMUT RUCK GmbH.

In elegant design, equipped with every option that treatment specialists and beauty salons need today, this wax warming pot gives every salon the ability to increase its efficiency and broaden its service range.

The wax warming pot is thermostatically controlled and ideal for use with many different types of depilatory wax.

DESIGN FEATURES AND FUNCTIONS

- 1. The lockable base plate can be removed and fastened to the top as a protective ring
- 1. Fixed protective ring on the top to better protect the insert
- 3. On/Off switch for the power supply
- 4. Power supply indicator light
- 5. Indicator light for the thermostat
- 6. Temperature control knob
- 7. Safety handle for easy handling of the wax warming pot
- 8. Lockable lid
- 9. Removable insert with handle and wiping element

INSTRUCTIONS FOR USE

Please carefully read the following instructions for use before starting to use the wax warming pot.

Before using the pot for the first time, you should ensure that the mains power characteristics match the values quoted on the rating plate. The device and mains cable should not be damaged.

IF THESE INSTRUCTIONS ARE NOT HEEDED, THE GUARANTEE WILL LAPSE AND WE CANNOT ACCEPT LIABILITY!





3



Abbreviations and symbols

| 5

4 | Contents

INHALTSVERZEICHNIS

linweise für den Gebrauch	3
nhaltsverzeichnis	4
bkürzungen und Symbole	5
icherheitshinweise und Netzsicherung	6
edienung	7
mpfehlungen und Reinigung	8
rsatzteile und Entsorgung	9
iewährleistung	10

DECLARATION RELATING TO THESE INSTRUCTIONS FOR USE

Hellmut Ruck GmbH reserves all rights to modify and supplement these instructions for use. Hellmut Ruck GmbH has taken great care to keep these instructions free of inaccuracies and omissions. Please contact us if you find mistakes or inaccuracies. However, Hellmut Ruck GmbH assumes no liability for mistakes in these instructions for use or consequential damage resulting from the provision of these instructions for use or their application when using the product.

These instructions for use must not be disseminated or supplemented without the express approval of Hellmut Ruck GmbH.

The manufacturer cannot be made responsible for damage that is caused by use that deviates from the intended use or failure to comply with the safety instructions and warnings.

ABBREVIATIONS AND SYMBOLS



This symbol identifies a potential point of danger for people or for the device itself. It must be taken note of.



This symbol identifies useful advice.

Additional information about the product and how to use it is provided here.



Observe the disposal notice









Operation

Safety notices

SAFETY NOTICES



Do not immerse the wax warming pot in water or use it in an area where there is a risk of water splashing onto it.



Prior to cleaning, always unplug the device and use only a small amount of cleaning agent.



The heating element of the wax warming pot gets very hot. NEVER move the wax warming pot during operation.



NEVER switch on the wax warming pot if it does not contain wax.

OPERATION

Remove the lid and take out the insert.

Attach the protective ring to the top edge of the wax warming pot.

Fill the insert with a sufficient amount of wax beads of your choice OR put in a can of wax instead of the insert.

After ensuring that the electrical power supply specifications of 230 V/50 Hz are fulfilled, connect the wax warming pot to the power supply and press the On/Off switch. The red indicator light indicates operation.

Turn the temperature control knob clockwise to the desired heating level, which depends on the type of wax chosen. The yellow thermostat display remains illuminated until the selected temperature level has been reached. The thermostat automatically turns the heater on and off to maintain the selected temperature.

To increase the temperature level, turn the control knob clockwise; to decrease it, turn it the other way.



Never put wax DIRECTLY into the heating container – only the insert may be used to heat wax. Plastic containers also should not be placed in the heating container.



The user should check the temperature of the wax before each application!









Spare parts and disposal

0

Recommendations and cleaning

RECOMMENDATIONS

Once you have found the optimal working temperature for your wax type, we recommend that you note the position of the temperature control knob or keep it in the same position and just press the On/Off switch.

To ensure optimum flexibility, the wax must be heated in the removable insert. For increased flexibility, additional inserts can be purchased separately.

To prevent loss of valuable working time, we recommend that you switch on the wax heater approx. 30 minutes before starting the treatment. This ensures that the wax reaches the correct temperature and consistency for treatment.

CLEANING

This wax warming pot should only be cleaned with specially designed wax cleaning agents (e.g. art. no. 4080701 RUCK® beautykultur Equipment Cleanser). With regular use of these cleaning agents, the wax warming pot will remain in excellent condition. Never use alcohol or ethyl alcohol, since these corrode the plastic and can cause damage.

Never use any other solvents, as these could damage the heating container and cause toxic gases to be emitted during operation.

Splashed wax on the casing should be removed as quickly as possible. Dry wax remnants are harder to remove. It is especially important that the On/Off switch be kept free of wax.

After use, pull the insert out of the heating container and use the special paraffin/wax cleanser to carefully remove all wax residues from the surfaces, especially from the insert and the heating container.

SPARE PARTS



Art. no. 30120 RUCK® Wax Warming Pot Insert

Art. no. 4080701 RUCK® beautykultur Equipment Cleanser

Please contact **RUCK SERVICE** for additional spare parts.

Telephone +49 (0)7082 944 22 55 Fax +49 (0)7082 944 22 59

E-mail service@hellmut-ruck.de

DISPOSAL



Environmental hazard!

Incorrect disposal endangers our environment



Please use available return and collection systems for disposing of the wax warming pot at the end of its service life.





7



10 | Warranty

Notes | 1

WARRANTY

The product comes with a 2-year warranty. Normal wear and tear of surfaces, handles, clamping devices and/or moving components such as rollers, bearings, plug connections, suction hoses, and so on, are excluded from this warranty.

Traces of use and signs of wear and tear due to age, service life and operation which are based on normal use corresponding to the performance specifications and/or the nature of the product are in accordance with the contract and are not defects from a legal standpoint.

The warranty runs from the date of purchase when the product was first bought. The date of purchase must be confirmed by the sales receipt. Within the scope of the warranty, HELLMUT RUCK GmbH will, at no charge, either repair or replace the defective products, at RUCK's discretion. This requires carriage-paid shipment of the defective product together with the purchase receipt. The local agent is responsible for claims made outside of Germany. In case of doubt, please check with RUCK before returning the device.

The warranty becomes null and void if we find that the problem was caused by improper or incorrect installation, assembly or usage, by non-observance of the instructions for use, by external intervention or as a result of a unauthorised repair or modification.

The warranty is limited to repair or replacement of the product. Further liability (loss of revenue or earnings in particular) is excluded. However, if it is determined that it is a problem that is not covered by the terms of the warranty or that the period of the guarantee has elapsed, any costs for inspection and repair must be borne by the customer.

We reserve the right to make changes to and deviations from the technical design.



HELLMUT RUCK GmbH

Daimlerstrasse 23 D – 75305 Neuenbürg

Tel. +49 (0)7082 944 20 Fax +49 (0)7082 944 22 22

E-mail kontakt@hellmut-ruck.de Website **www.hellmut-ruck.de**